




TOYOTA HOW TO UPDATE YOUR INFOTAINMENT SYSTEM

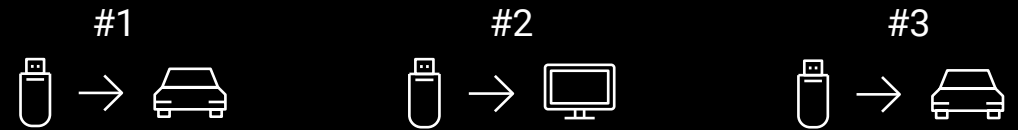

Contents

- **Requirements**
- **Instructions: How to Update your Infotainment System**
 1. Prepare Media
 2. Retrieve Software Update
 3. Install Update in Vehicle
- **FAQ**

Requirements

YOU WILL NEED

- Computer with Windows® system (no tablets or mobile devices);

Windows – System Requirements

- Windows 7 SP1 or newer, Microsoft .NET 4.5 (included)
- 1024 x 768 display, USB port and 1 GB RAM
- May require up to 20 GB free disk space

- USB drive

USB drive specification should be as followed:

 
- FAT32 formatted USB flash drive (NTFS NOT supported)
- USB2.0 (USB3.0 support is NOT guaranteed)
- 4 GB or higher (up to 32GB)

- High-speed internet access

Instructions: How to Update your Infotainment System

1



PREPARE MEDIA

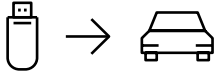

1. Format a USB drive.

Follow these steps to prepare and format USB drive:


- 1) Insert your USB drive into the appropriate slot on your computer
- 2) Right click on the USB drive icon
- 3) Select **Format**
- 4) For File System, select **FAT32**
- 5) Select **Start**

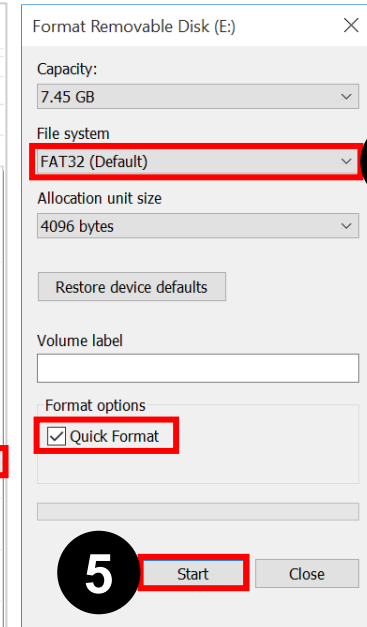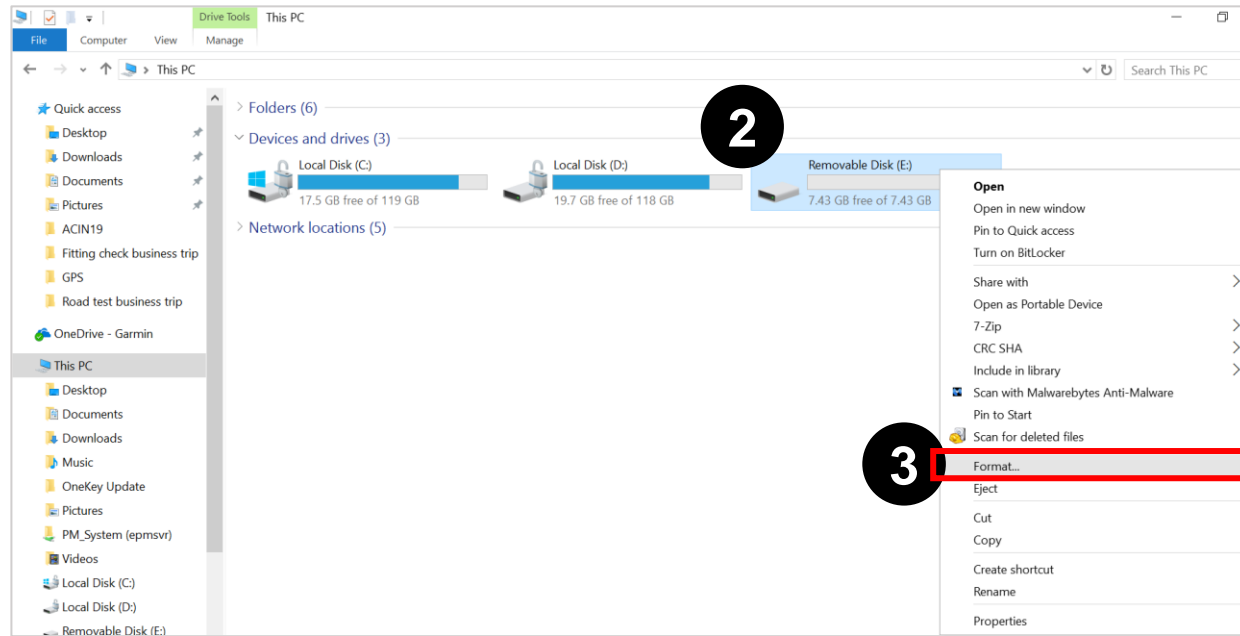

Instructions: How to Update your Infotainment System


1

 PREPARE MEDIA

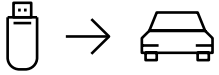


2. Use the ignition system to turn on vehicle and tap **OK** on the "Caution" screen. Insert your USB drive into the appropriate slot on your infotainment system.

"Caution" Screen

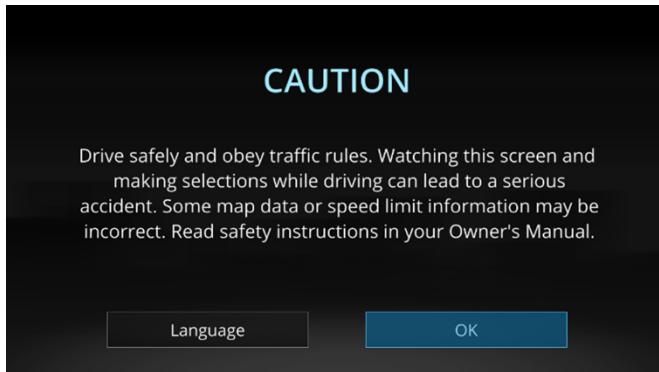

Main Page

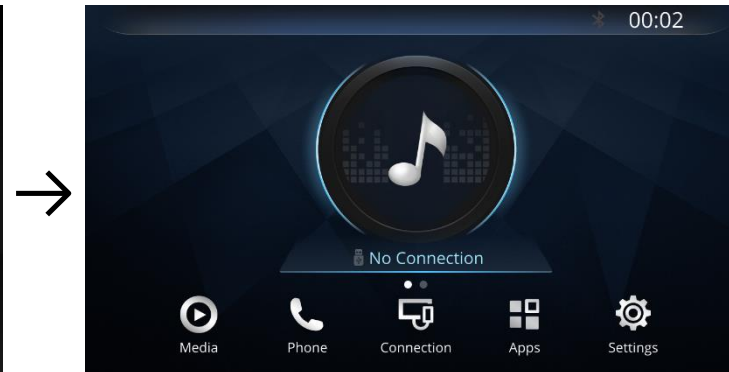

Refer to your vehicle's owner manual for the location of the USB drive slot.

 
Insert USB Drive




Instructions: How to Update your Infotainment System

1


PREPARE MEDIA

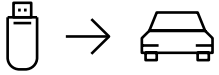


3. Select **Settings** > **About** > **Software Update**.

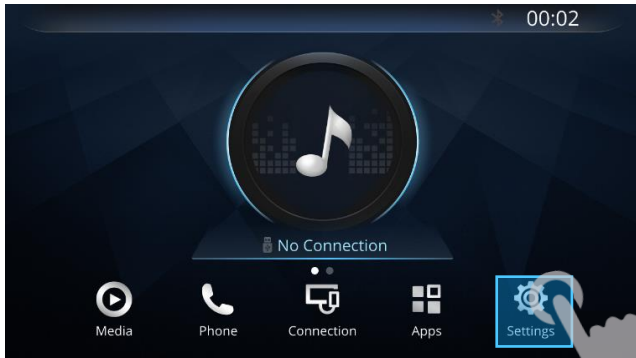

① Select **Settings**


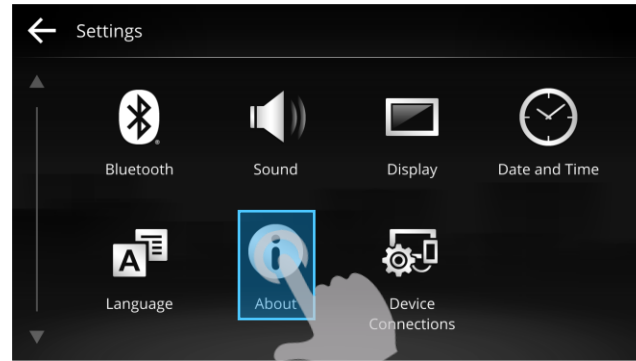


② Select **About**

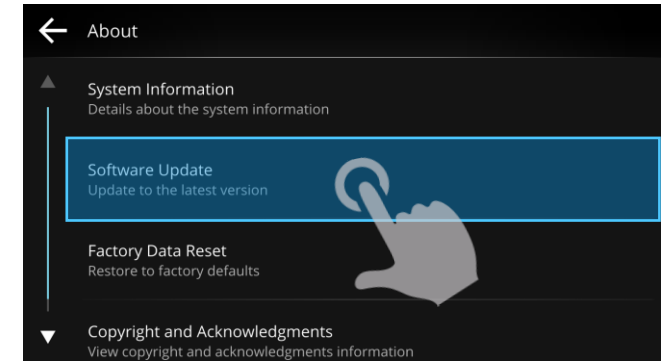

③ Select **Software Update**


4. Select **Set up USB Drive**. Your Infotainment System will display "Set up completed", Select **OK** and remove the USB drive.

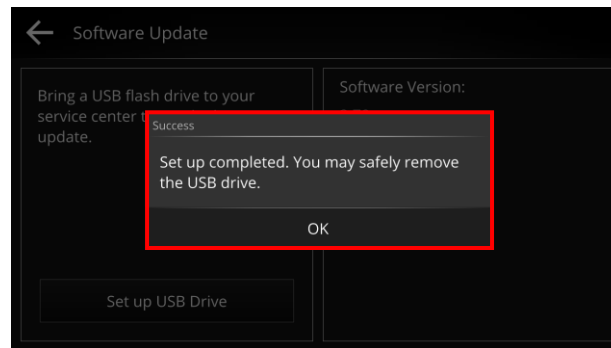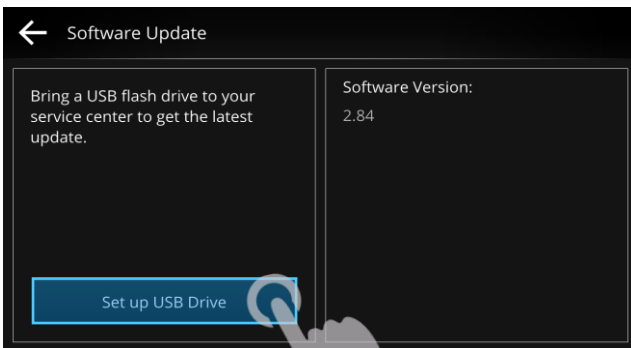


Instructions: How to Update your Infotainment System

2

 RETRIEVE SOFTWARE UPDATE



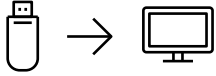


1. Open **Garmin Updater** (Launcher.exe) on your computer.
Garmin Updater is free desktop software for updating Garmin devices.

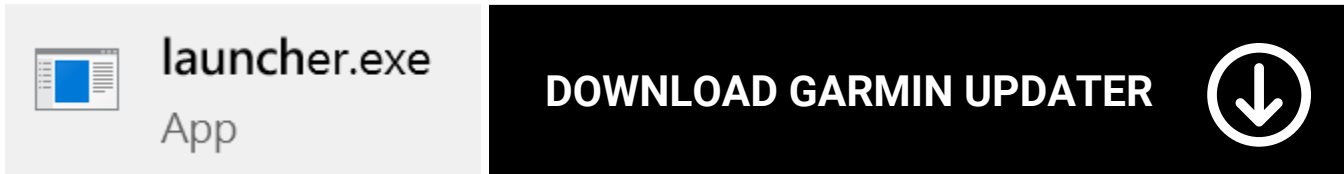

<https://download.garmin.com/asia/download/PCSyncTool/SW/ToyotaSEA/launcher.exe>


2. Connect USB drive to your computer, and wait for it to be detected, then tap **OK**.

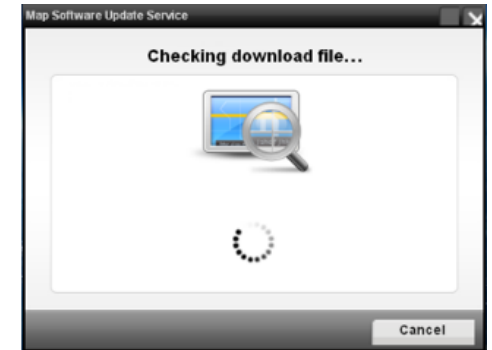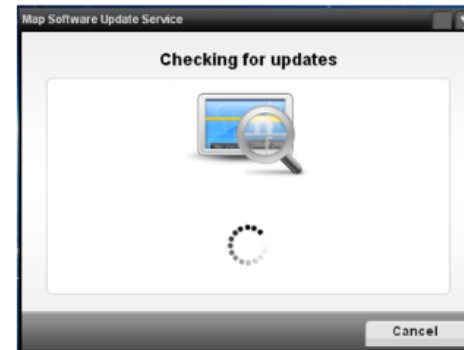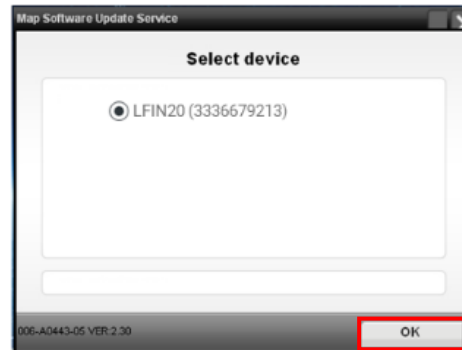






Instructions: How to Update your Infotainment System

2

 RETRIEVE SOFTWARE UPDATE

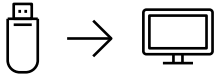


 3. If an update is available, select **Update**. The download and installation will begin. The time it takes depends on your internet speed.

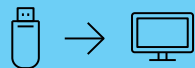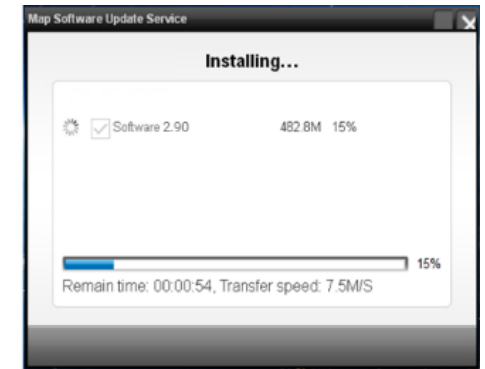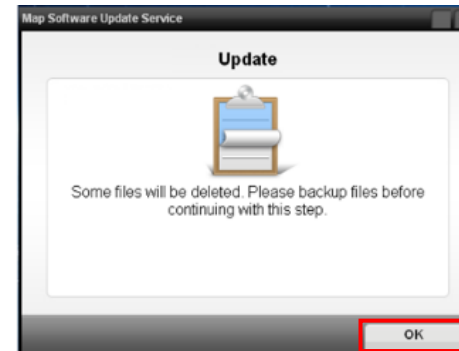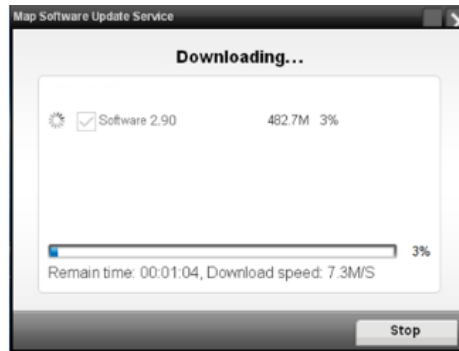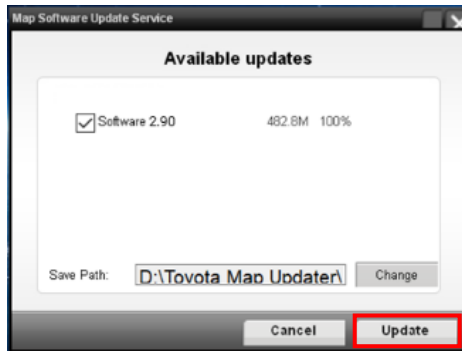

Keep USB drive connected throughout the process


4. When the installation is complete, remove the USB drive.

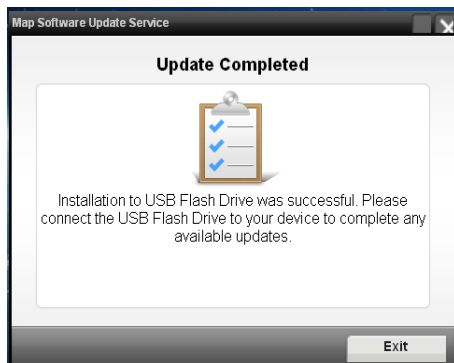

Instructions: How to Update your Infotainment System


3

 INSTALL UPDATE IN VEHICLE

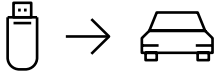

1. Use the ignition system to turn on vehicle and tap **OK** on the "Caution" screen. Insert your USB drive into the appropriate slot on your infotainment system.


"Caution" Screen

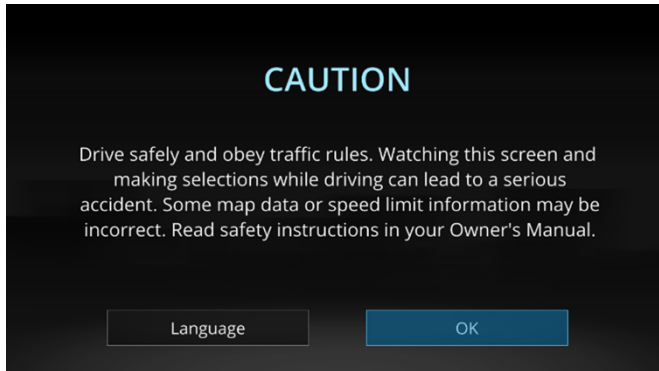

Main Page




2. System update pop-up will appear automatically. Select **Update**.

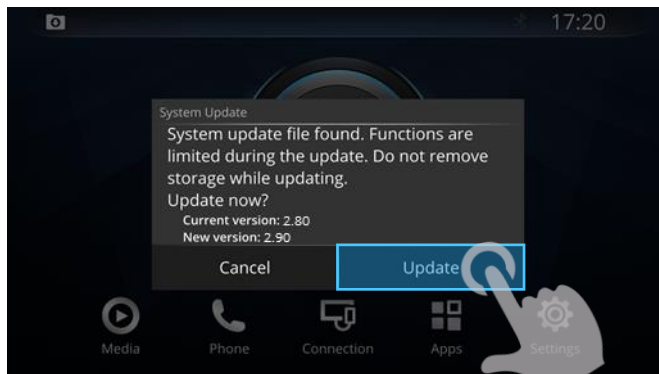


Instructions: How to Update your Infotainment System

3

 INSTALL UPDATE IN VEHICLE

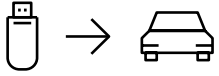

 3. Installation will begin automatically and may take up to 10 minutes. You may see the system power off and restart. Your Infotainment System will display "Updated successfully" if the software was updated successfully.

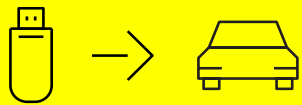


Keep USB drive connected throughout the process and do not turn off the system or engine during this process.

FAQ


If you have any questions or encounter issues, please contact Garmin support at aoem.service@garmin.com.

1. How can I tell what software version installed on my infotainment system?


In your infotainment system, you can see your software version by going to **Settings > About > Software Information**.

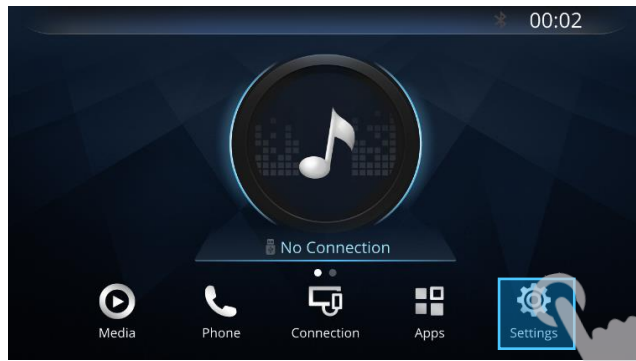

① Select **Settings**

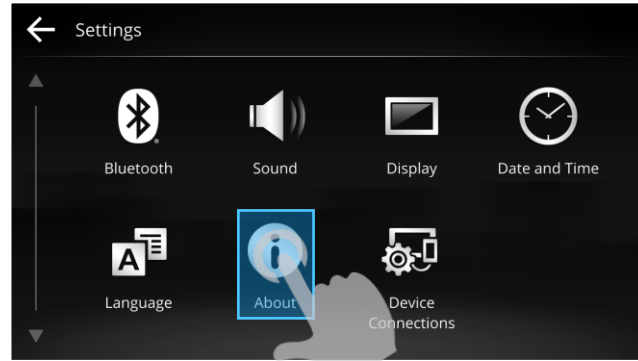

② Select **About**

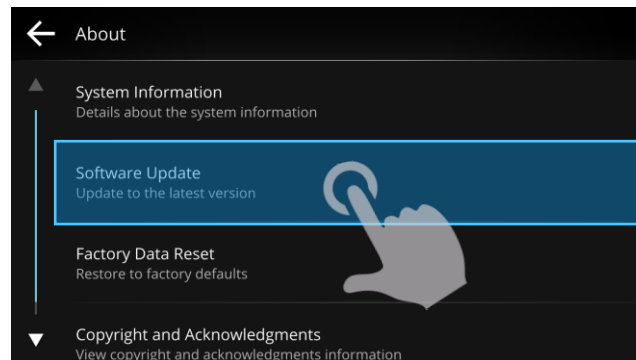

③ Select **Software Update**



Software Version



Visit '**SOFTWARE RELEASE NOTES**' page for the complete list of software release

FAQ

If you have any questions or encounter issues, please contact Garmin support at aoem.service@garmin.com.

2. What do I need to get a software update?


You will need a USB drive (4 GB or higher, up to 32GB with FAT32 format) and computer with high-speed internet connection.

3. How long does an Infotainment System update take?

The time required will vary based on file size. Please allow up to 10 minutes of time to complete update on Infotainment System.

4. How can I tell that my Infotainment System updated successfully?


Your Infotainment System will display "Updated successfully" if the software was updated successfully.

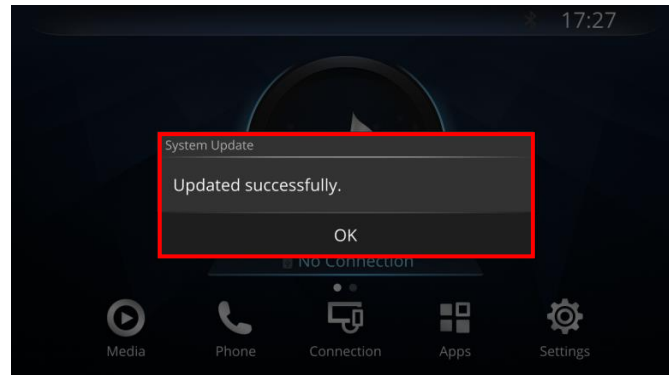


FAQ



If you have any questions or encounter issues, please contact Garmin support at aoem.service@garmin.com.

5. My update won't start when I plug in the USB drive. What do I do?

Hold power button  for 10 sec to restart your infotainment system, and re-insert your USB drive into your infotainment system.

6. My update invalid or failed (Pop-up message: "Invalid Update" or "Update Failed. Retry?"). What do I do?

Select **OK** then hold power button  for 10 sec to restart your infotainment system, and re-insert your USB drive into your infotainment system.

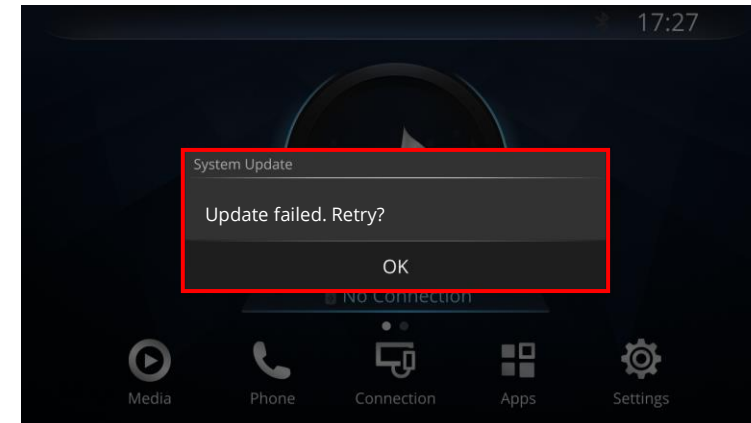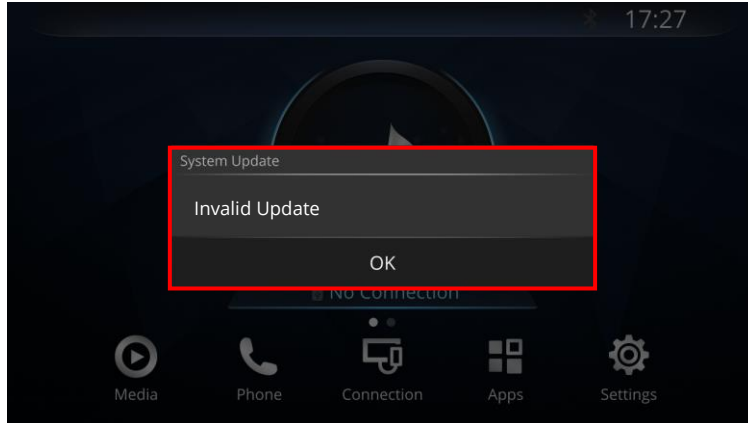

Note: If issue persists, change USB drive and restart the update process by following the instructions provided on this manual ["Instructions: How to Update your Infotainment System"](#).

Ends.

If you have any questions or encounter issues, please contact Garmin support at aoem.service@garmin.com.